

# SHOT CLOCK SET-UP INSTRUCTIONS FOR DAKTRONICS ALL-SPORT 5000 CONSOLES

**Before Turning On Scoreboard:** Ensure that the shot clock controller (the one with two reset buttons) is attached to the back of the console.

**When Turning On Scoreboard: Make** sure that the console is in one of the basketball modes indicated on the insert (1101, 1102, 1103, 1104, 1105).

If you use the scoreboard in another mode (such as volleyball), the shot clock will not work.



## Shot Clock Set-Up

1. Press the black **MENU** button, use the down arrow to go to Settings and press **YES/ENTER**.
2. Use the down arrow to scroll until the console display reads **SHOT CLOCK – MODE – TENTH SECOND?** Make sure this is set to **NO**.
3. Use the down arrow to scroll until the console display reads **SHOT CLOCK – TIME RESET 1**. Set this to 35 seconds and then press **YES/ENTER**. This will set the Reset 1 button on the controller to reset the shot clock to 35 seconds.
4. Use the down arrow to scroll until the console display reads **SHOT CLOCK – TIME RESET 2**. Set this to 20 seconds and then press **YES/ENTER**. This will set the Reset 2 button on the controller to reset the shot clock to 20 seconds.
5. Use the down arrow to scroll until the console display reads **SHOT CLOCK – MODE – SYNC W/MAIN?** Press **YES/ENTER**.
  - This setting syncs the shot clock to start and stop with the game clock, allowing the shot clock operator to focus only on having to reset after a change of possession.
6. Use the down arrow to scroll until the console display reads **SHOT CLOCK – MODE – AUTO BLANK?** Press **YES/ENTER**.
  - This setting will automatically allow the shot clock to shut off when reset with under 35 seconds left in each quarter.

**IN-GAME SHOT CLOCK OPERATION ON BACK SIDE >>>**

## SHOT CLOCK OPERATION DURING THE GAME

**At The Opening Tip:** Make sure that the rocker switch on the shot clock controller is on **STOP** at the opening tip. Press the switch to **CLOCK START** once possession is gained after the jump. **NOTE: The shot clock DOES NOT START WHEN THE BALL IS TIPPED.** The shot clock starts when a team clearly gains possession of the ball.

**Pro Tip:** Consider labeling the buttons on the controller for the appropriate reset times. The Reset 1 button should reset to 35 seconds. The Reset 2 button should reset to 20 seconds.



**In The Event Of A Shot Clock Error:** There are two ways to reset the shot clock in the event of a timing error. Both buttons to reset are located in the black section of the scoreboard insert between the home and visiting team controls (highlighted in yellow in the picture).

**Manually Setting The Shot Clock:** Press **SET SHOT TIME**, key in the time and press **YES/ENTER**.

**Recall Shot Time:** To recall the last time shown on the clock after a reset, press **RECALL SHOT TIME** and then press **YES/ENTER**.

